


PIASINI

engineering

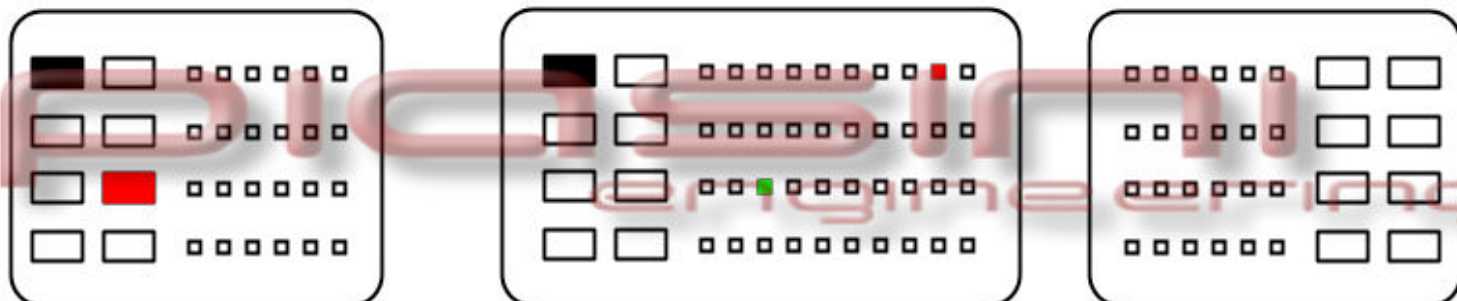

Connect as below:


Serial Suite:

Red
Black
Green



to
to
to

ECU Plug:

2 Pins Red (Power Supply +12 Volt)
2 Pins Black (Ground)
1 Pin Green (K Line)

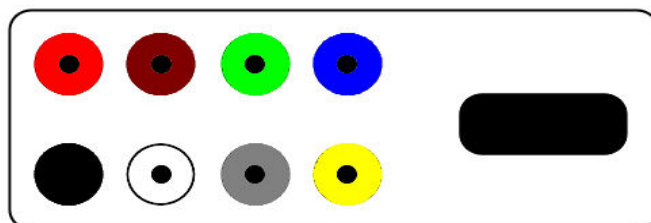

Bootstrap's Pin:

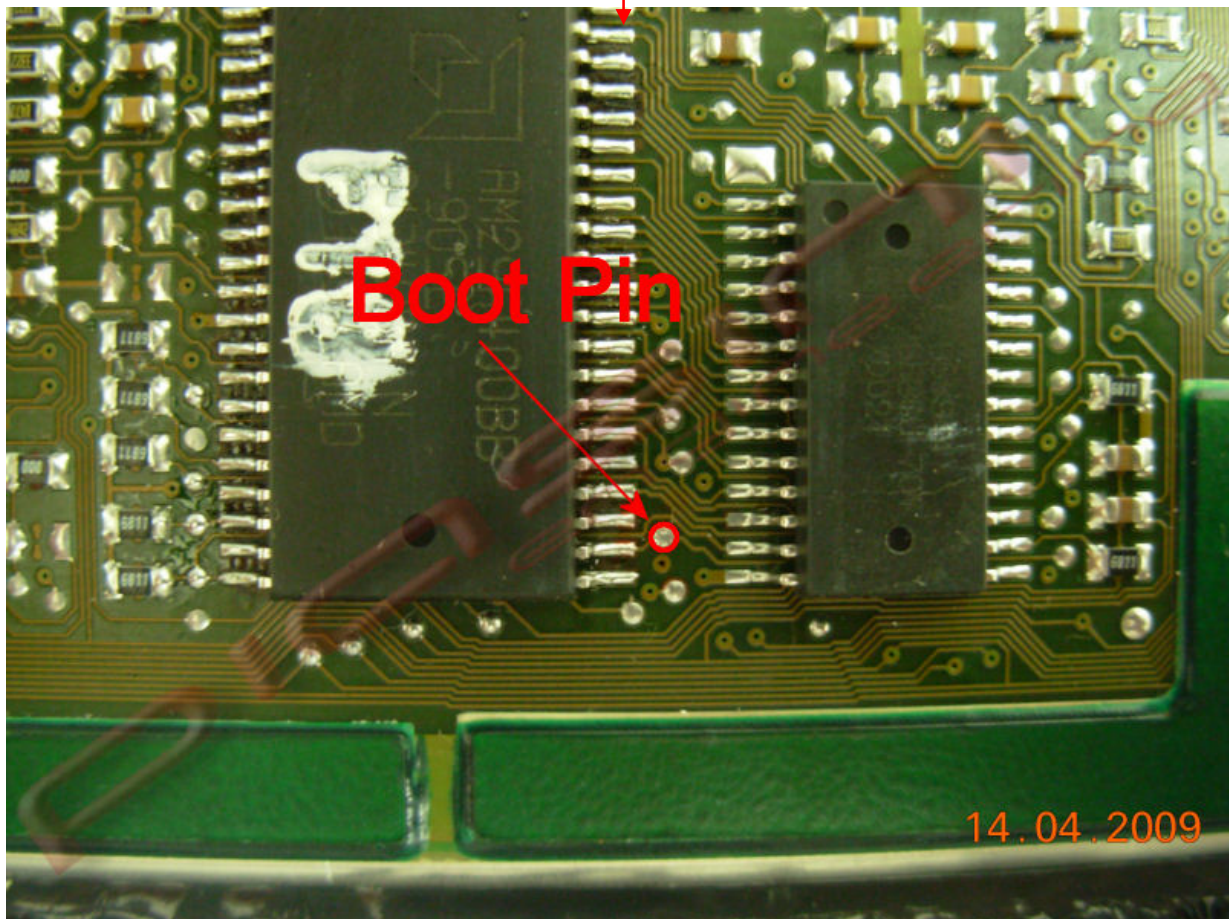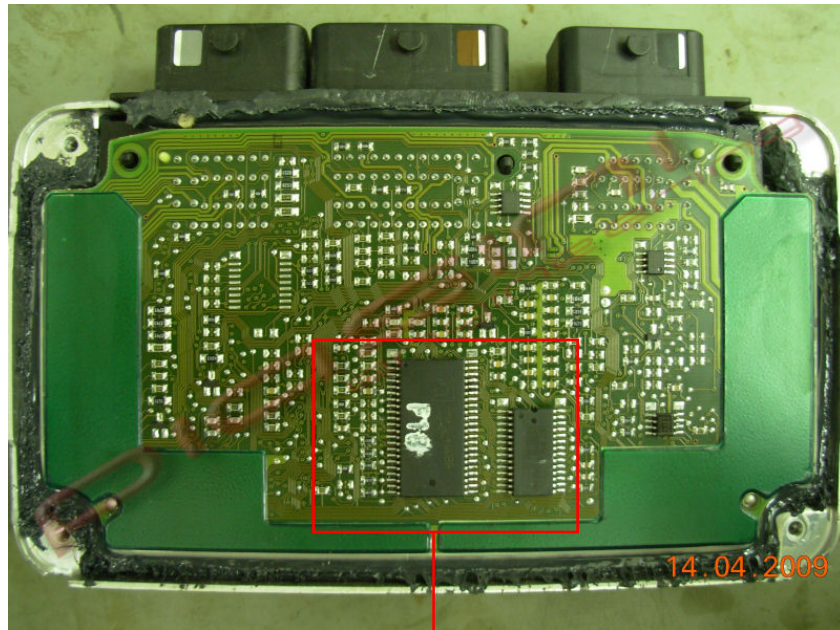

The boot pin you have to connect it to Serial Suite's blue banana through the appropriate cable and the metal point. Holding connect the metal point for some second and during the connection time it will be able the READ and WRITE of Ecu.